



SAFETY INSTRUCTIONS

1. Do not use outdoors. 2. Equipment should be mounted securely in locations and at heights where it will not be readily subjected to tampering by unauthorized personnel. 3. Do not mount near gas or electric heaters. 4. Cap unused wires with enclosed wire nuts or other approved method. 5. Do not use this equipment for anything other than its intended use. 6. The use of accessory equipment not recommended by the manufacturer will void product listing and warranty and may cause an unsafe condition. 7. Use caution when servicing batteries. 8. Any service on this equipment should be performed by qualified personnel only. 9. Make sure wire terminations are secure and leads are properly tucked in appropriate wire channels. **CONSULT A QUALIFIED ELECTRICIAN BEFORE INSTALLING**



Caution:

Disconnect AC power before servicing and installation. All electrical connections must be in accordance with NEC/CEC or your local code.



Attention:

Mounts permanently to outlet box. Allows any lampholder to 300W maximum to be converted to canopy installation.

INSTRUCTIONS STEPS

1. Attach Mounting Plate to Junction Box by two Mounting Screws provided.
2. Hold the cover and attach BK fixture wire to BK house wire, WH fixture wire to WH house wire, Green fixture wire to Green house wire by wire connectors provided.
3. Tuck the wires into the Outlet Box.
4. Fix the cover over the Mounting Plate by two set screws.

INSTALL THE TRACK HEAD

1. Insert the adaptor head into the slot of Monopoint cover.
2. Pull down the sleeves and twist Adaptor about 90 degree until mounting sleeves tab locks into the Monopoint slot.
3. Note forcing mounting adaptor in wrong direction may damage the contact assembly. Polarity tab on Adaptor must align with polarity groove on Monopoint for proper installation.

REMOVE THE TRACK HEAD

1. Pull down mounting Adaptor sleeves and twist adaptor 90 degree until Adaptor is free from the opening of Monopoint

