



SAFETY INSTRUCTIONS

1. Do not use outdoors. 2. Equipment should be mounted securely in locations and at heights where it will not be readily subjected to tampering by unauthorized personnel. 3. Do not mount near gas or electric heaters. 4. Cap unused wires with enclosed wire nuts or other approved method. 5. Do not use this equipment for anything other than its intended use. 6. The use of accessory equipment not recommended by the manufacturer will void product listing and warranty and may cause an unsafe condition. 7. Use caution when servicing batteries. 8. Any service on this equipment should be performed by qualified personnel only. 9. Make sure wire terminations are secure and leads are properly tucked in appropriate wire channels. **CONSULT A QUALIFIED ELECTRICIAN BEFORE INSTALLING**



Caution:

Disconnect AC power before servicing and installation. All electrical connections must be in accordance with NEC/CEC or your local code.



Warning:

The Maximum weight of each pendant can sustain is 25 Lbs only for chain-hung styled pendant light and 10lbs only for cord-hung styled pendant light. Maximum load of power is 300 Watts

INSTRUCTIONS STEPS

1. Remove the top cover by loosening the screws.
2. Insert cord from the light fixture into the hole of fitting.
3. Make a knot, and under the knot, clamp the 3 wires from the light fixture by a strain relief.
4. Wiring: Connect Black wire from the fixture to Black wire from the top cover; White wire from the fixture to WH wire from the top cover; Green ground wire from the fixture to Green ground wire from the top cover with the wire connectors provided.
5. Install the top cover back by tightening the screws.

***1 Circuit Only**

