



SAFETY INSTRUCTIONS

1. Do not use outdoors. 2. Equipment should be mounted securely in locations and at heights where it will not be readily subjected to tampering by unauthorized personnel. 3. Do not mount near gas or electric heaters. 4. Cap unused wires with enclosed wire nuts or other approved method. 5. Do not use this equipment for anything other than its intended use. 6. The use of accessory equipment not recommended by the manufacturer will void product listing and warranty and may cause an unsafe condition. 7. Use caution when servicing batteries. 8. Any service on this equipment should be performed by qualified personnel only. 9. Make sure wire terminations are secure and leads are properly tucked in appropriate wire channels. **CONSULT A QUALIFIED ELECTRICIAN BEFORE INSTALLING**



Caution:

Disconnect AC power before servicing and installation. All electrical connections must be in accordance with NEC/CEC or your local code.

INSTRUCTIONS STEPS

- 1.** Remove live end cover from fitting. Place track attached over outlet box and mark on ceiling or wall the position of the track mounting holes.
- 2.** Loosen set screw and insert connector with Embossed Polarity Arrow (Polarity side of two finger-Grounding contacts) Pointing to Debossed Track polarity line for proper installation.
- 3.** Tighten set screw to lock to track.
Note: Track ends must be terminated with either a dead end or a connector. Pull wires from box thru the side live end as shown. Fasten track to ceiling following instructions supplied with the track section.
- 4.** Cut and strip wires from box and connect black wire from box to brass screw terminal. Connect white wire from box to nickled-plate screw terminal.
- 5.** Fasten ground green wire to the green ground screw. Push excess wire back into outlet. Replace cover on live end and tighten screw.

