FEATURES

02/28/24

**RF wireless Dual Color Remote can control 1 zone of receiver.** This CCT color controller is compatible with all universal series RF receivers. One receiver can be paired with **a maximum of 8 remote controllers.** This device contains a button lithium battery that should be stored and disposed of properly. **DO NOT expose the device to moisture.**

- Control 1 zone of receiver.

- CCT color controller.

- Compatible with all universal series RF receivers.

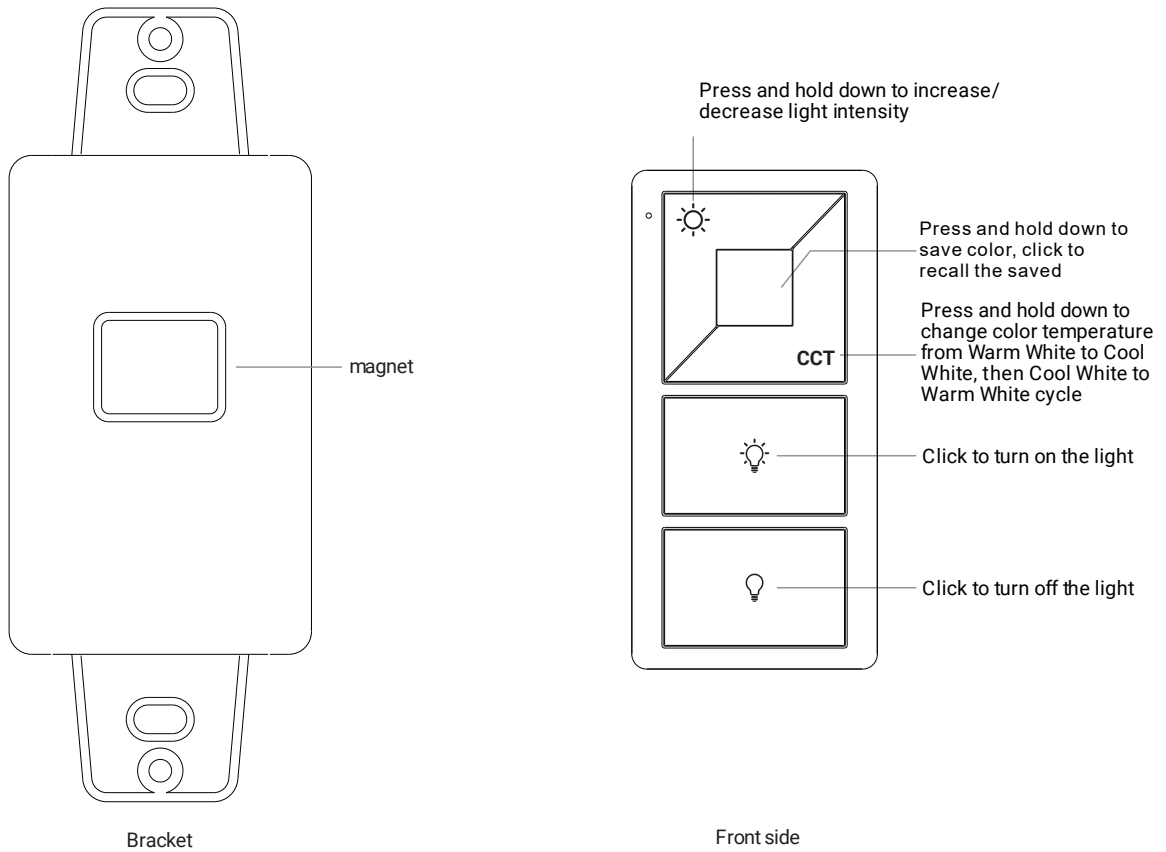- 1 receiver can be paired by max 8 different remote controls.

DIMENSIONS

1.2"
2.5"
0.35"
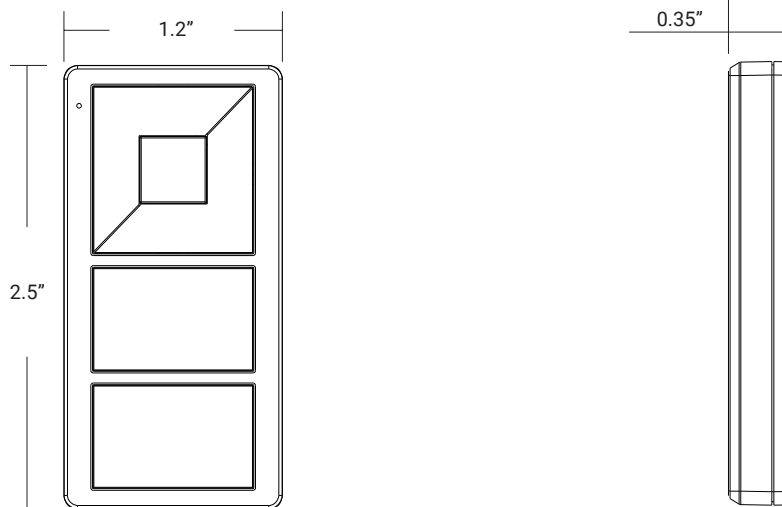
TECHNICAL DETAILS

Output Signal	RF Signal	**Certifications**	FCC / RoHS
Power Supply	3V (CR2032 battery)	**Zones**	Control 1 Zone of receiver
Operating Temperature	0-40°C / 32°F-104°F	**Frequency**	916.5MHz
Dimensions	2.5"X1.2"X0.35"	**Rated**	IP20
Color	White	**Warranty**	5 Years limited warranty

IP20 RATED **FCC** **RoHS COMPLIANT**

Due to the changes of constant improvement in LED technology, all details are subject to change **without notice**. Consult factory for **up to date information**.
02/28/24

MASTER CONTROL OPERATION.

magnet

Bracket

Press and hold down to increase/decrease light intensity

Press and hold down to save color, click to recall the saved

Press and hold down to change color temperature from Warm White to Cool White, then Cool White to Warm White cycle

CCT

Click to turn on the light

Click to turn off the light

Front side

Note: Before the first use, please remove the protective film on the battery.

Back side

Pair With RF Receiver
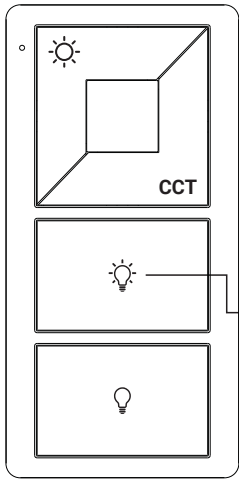
Step 1: Wire the RF receiver according to the wiring diagram. (Please refer to the instruction manual of the RF receiver that you would like to pair with).

CCT

R F L E D R eceiver

Learning Key

Step 2: Click the "Learning Key" button on the RF receiver or power on the receiver three times continuously to set it into pairing status.

Step 3: Click any button on the remote (e.g., button). LED lights connected to the RF receiver will flicker once, indicating successful pairing between the receiver and the remote.

NOTE: One receiver can be paired by max 8 different remote controls.

INSTALLATION

1.

2.

3.