



SAFETY INSTRUCTIONS

1. Do not use outdoors. 2. Equipment should be mounted securely in locations and at heights where it will not be readily subjected to tampering by unauthorized personnel. 3. Do not mount near gas or electric heaters. 4. Cap unused wires with enclosed wire nuts or other approved method. 5. Do not use this equipment for anything other than its intended use. 6. The use of accessory equipment not recommended by the manufacturer will void product listing and warranty and may cause an unsafe condition. 7. Use caution when servicing batteries. 8. Any service on this equipment should be performed by qualified personnel only. 9. Make sure wire terminations are secure and leads are properly tucked in appropriate wire channels. **CONSULT A QUALIFIED ELECTRICIAN BEFORE INSTALLING**




Caution:

Disconnect AC power before servicing and installation. All electrical connections must be in accordance with NEC/CEC or your local code.

Installation Steps

1.



Position housing and then secure frame to structure by hammering the nails into the joist.

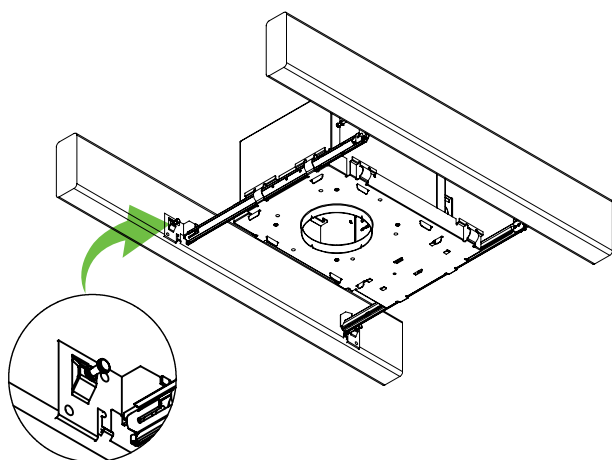

Other Mounting Options

1.


Position housing and then secure frame to structure by hammering the nails into the joist.

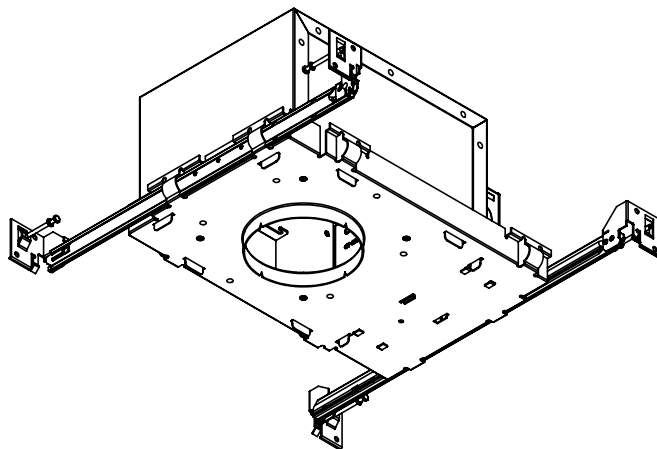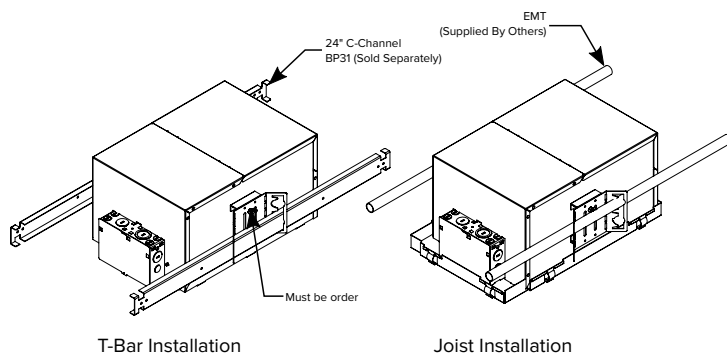

A3-LED Wiring

2.


Connect all electrical connections. Wiring diagram on the left is for line voltage dimming, for other dimming wiring diagrams please refer to the Wiring Diagram page.

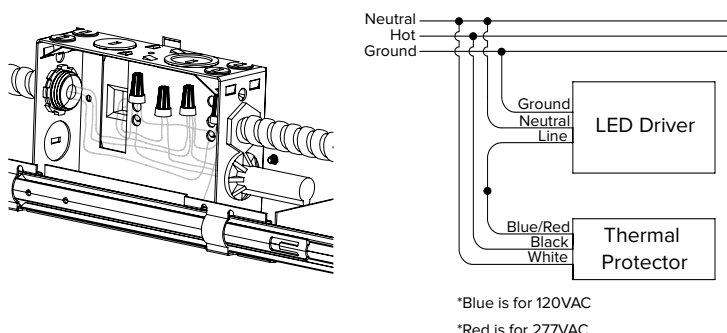

A3-LED-IC Wiring

2.


Connect all electrical connections. Wiring diagram on the left is for line voltage dimming, for other dimming wiring diagrams please refer to the Wiring Diagram page.

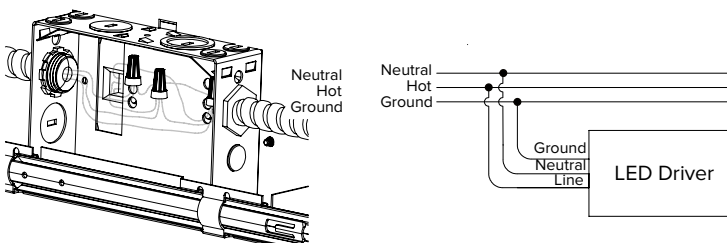

Identification

3.


Identify all 4 screws holes. This will be necessary for trimless.

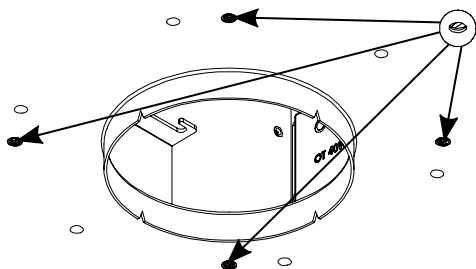

Finishing


4.

Position housing and then secure frame to structure by hammering the nails into the joist.

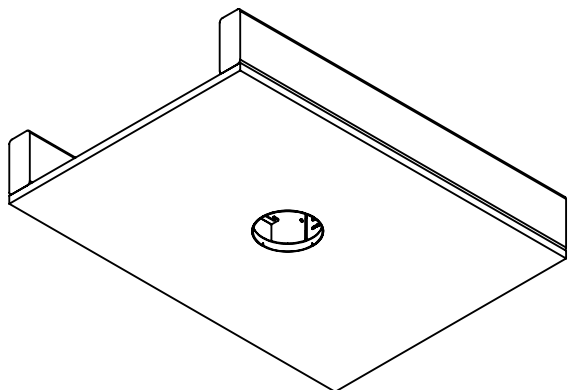

5.

Insert the flange trim by squeezing v-spring into the bracket slot.

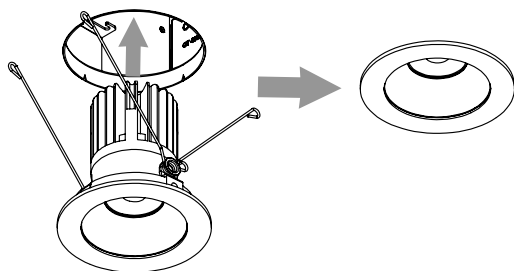


END OF FLANGE TRIM

Flangeless Trim


5.

Draw horizontal & vertical lines passing through the marks in the opening. Using the template supplied 1/2" drill the holes. DO NOT DRILL THROUGH THE HOUSING STOP AS SOON AS IT TOUCH THE HOUSING.

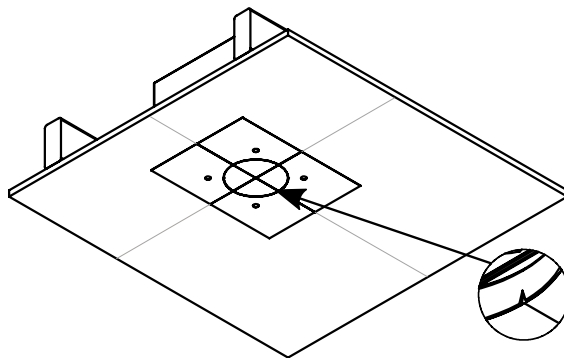


6.

Raise the flangeless trim into the cutout and secure it by screwing all 4 screws supplied as shown in Fig A. Apply plaster or spackle over mesh ring as shown in Fig B. Once dry sand surface for a finished look.

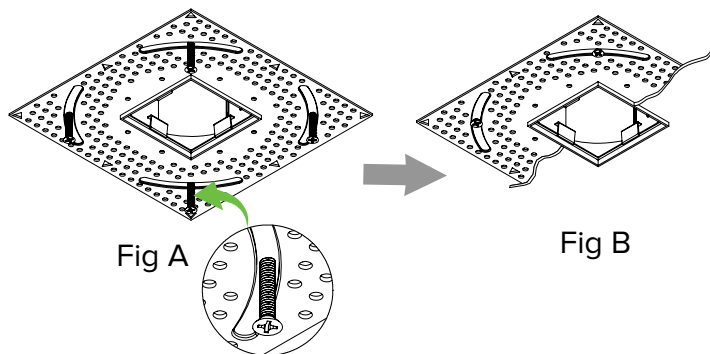

7.

Insert the flangeless trim.

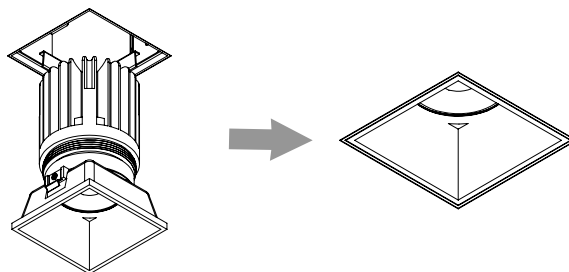

END OF FLANGELESS TRIM