INSTRUCTIONS

RL687 6" LED RETROFIT SQUARE TRIM DOWNLIGHT

PAGE 1 OF 1



SAFETY INSTRUCTIONS

1. Do not use outdoors. 2. Equipment should be mounted securely in locations and at heights where it will not be readily subjected to tampering by unauthorized personnel. 3. Do not mount near gas or electric heaters. 4. Cap unused wires with enclosed wire nuts or other approved method. 5. Do not use this equipment for anything other than its intended use. 6. The use of accessory equipment not recommended by the manufacturer will void product listing and warranty and may cause an unsafe condition. 7. Use caution


4.

when servicing batteries. 8. Any service on this equipment should be performed by qualified personnel only. 9. Make sure wire terminations are secure and leads are properly tucked in appropriate wire channels.



Caution:

Disconnect AC power before servicing and installation. All electrical connections must be in accordance with NEC/CEC or your local code.

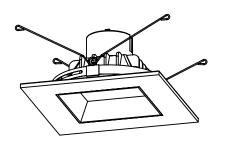

For existing recessed can with orange connector skip step 2-4 and discard medium base adapter.

Installation Instructions


1.

Remove existing trim installed in recessed housing (if necessary). 2.


If applicable, slide lampholder bracket to its upward maximum position. If the lampholder bracket is less than 4.5 inches from the bottom edge of the fixture enclosure, the lampholder bracket must be removed.

3.

If necessary, remove the lampholder mounting bracket and the lampholder from the bracket, then attach the provided label to the existing luminaire.

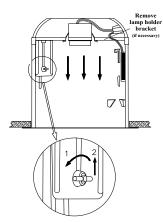


Install adapter into socket

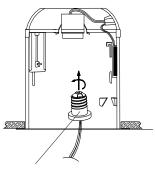

Install the adapter


5.

Using the switch on the driver, select the desirable correlated color temperature (CCT).



6.

Connect the orange connectors together. (For cans without medium base connect it to the orange connector from the can).



7.

Rotate the ring to the desired position and squeeze the torsion springs and insert the trim into the can.

