


IMPORTANT SAFEGUARDS

Use basic safety precautions when working with electrical equipment.
READ AND FOLLOW ALL SAFETY INSTRUCTIONS

INSTALLATION INSTRUCTIONS





Caution: Disconnect power before installation.
Product must be installed in accordance with NEC or your local electrical code. If you are not familiar with these codes and requirements, consult a qualified electrician.
Do not handle energized luminaire with wet hands, when standing on wet or damp surfaces, or in water.

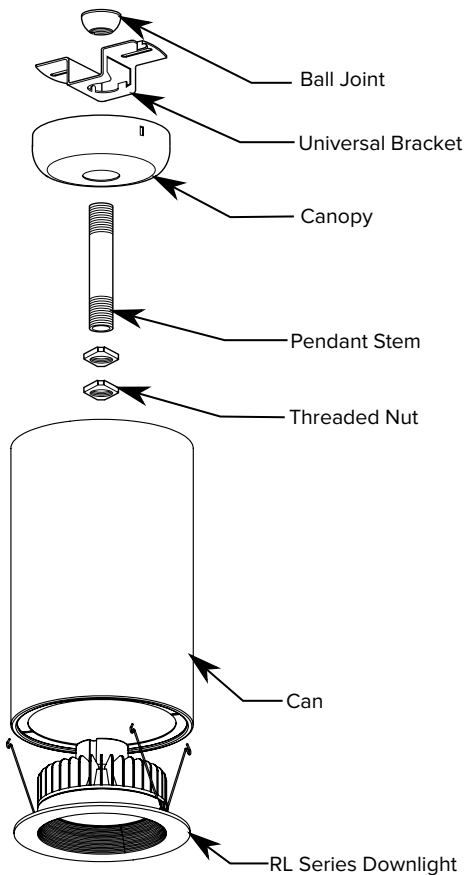


BOLLARD INSTALLATION


1. Squeeze the sides of the canopy to slide the canopy off the universal mounting bracket and remove it

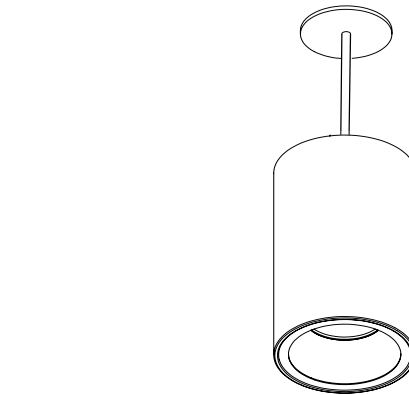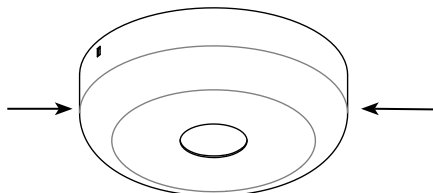

2. Attach universal mounting bracket to junction box (by others) using hardware supplied.

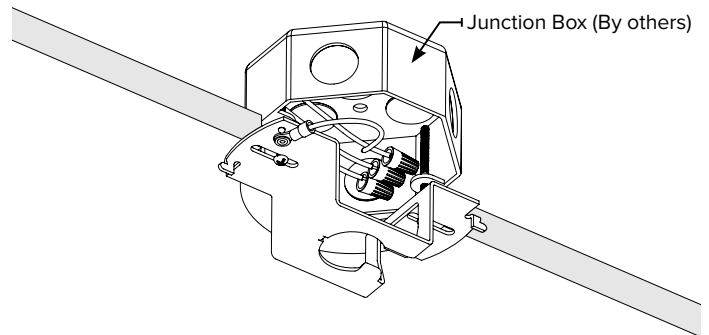


3. Insert ball joint through opening on universal mounting bracket and then align the groove on the ball joint with the tab on the universal mounting bracket..

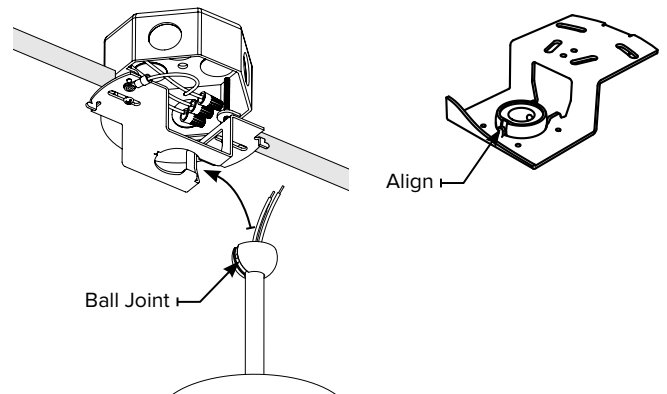


IMPORTANT SAFEGUARDS

Use basic safety precautions when working with electrical equipment.
READ AND FOLLOW ALL SAFETY INSTRUCTIONS


- 4.**
Make electrical connections inside of universal mounting bracket.
Use wiring diagram as reference

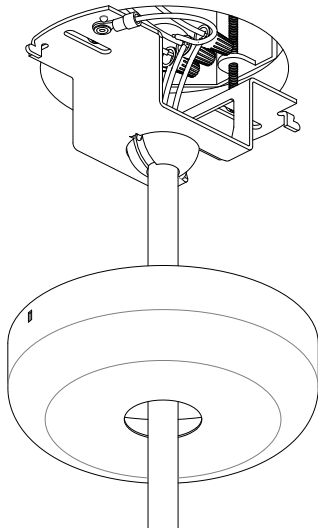


- 5.**
Slide canopy up and align with the fasteners on the universal mounting bracket. Ensure canopy fastens over both mounting bracket fasteners.

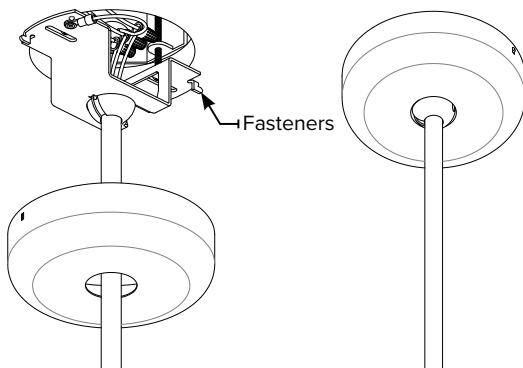

- 6.**
Screw threaded nut to threaded pendant stem, and then feed it through the hole and screw the second threaded nut inside the can.

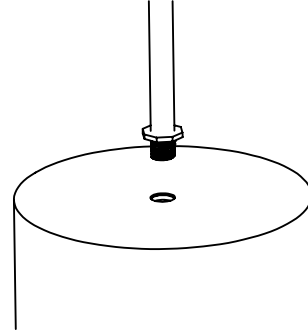

- 7.**
Snap-in the yellow and orange quick disconnectors.

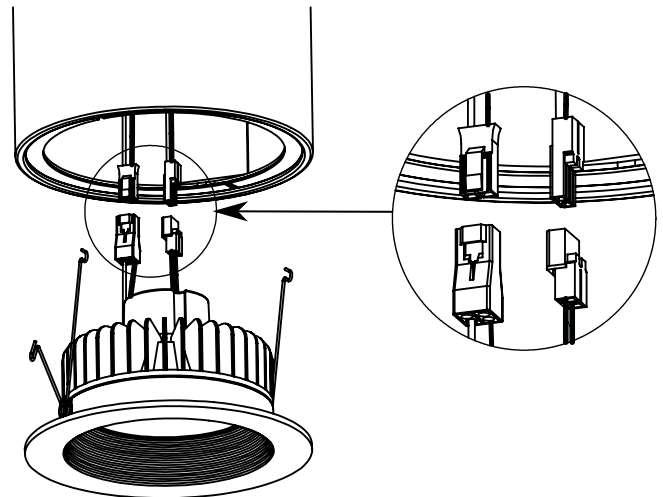

- 8.**
Squeeze the torsion springs and insert them into the slot bracket. Pushup the recessed downlight.

