



WARNING:

**RISK OF FIRE OR ELECTRIC SHOCK,
TURN OFF ELECTRICITY AT THE
FUSE OR CIRCUIT BREAKER BOX
BEFORE WIRING.**


**THIS PRODUCT MUST BE INSTALLED
BY A PERSON FAMILIAR WITH THE
CONSTRUCTION AND OPERATION OF
THE PRODUCT AND THE HAZARDS
INVOLVED, IN ACCORDANCE WITH
APPLICABLE NEC CODE.**

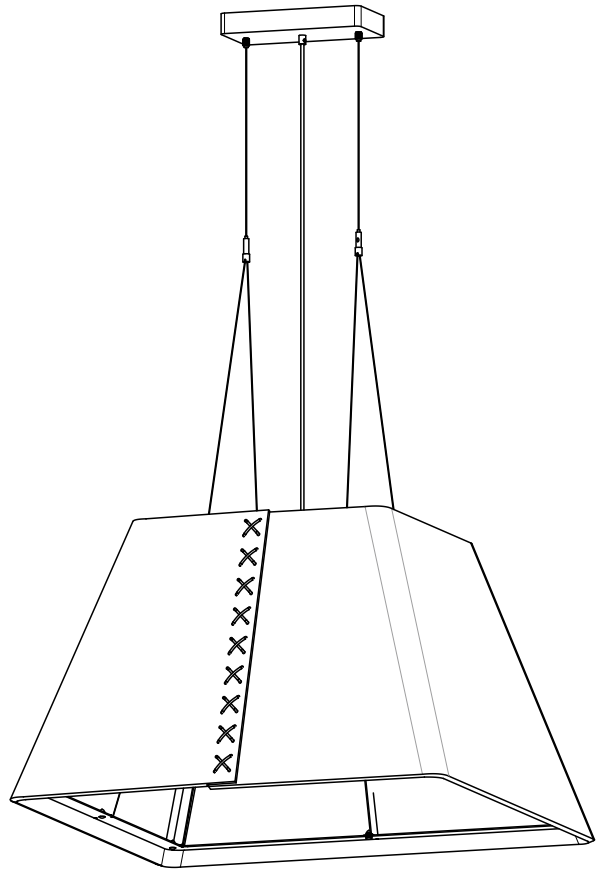


1. Install the suspension hardware

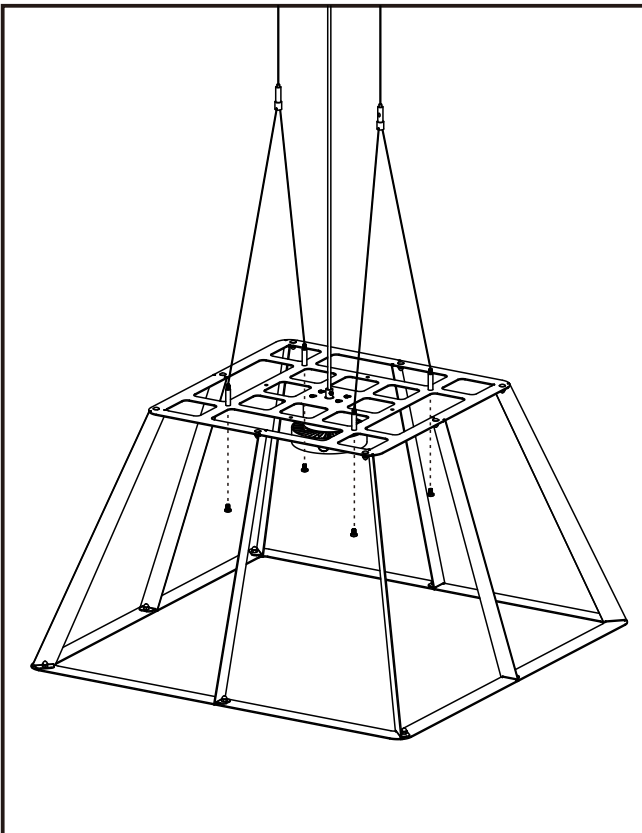


2. Fit the acoustic lampshade onto the fixture frame

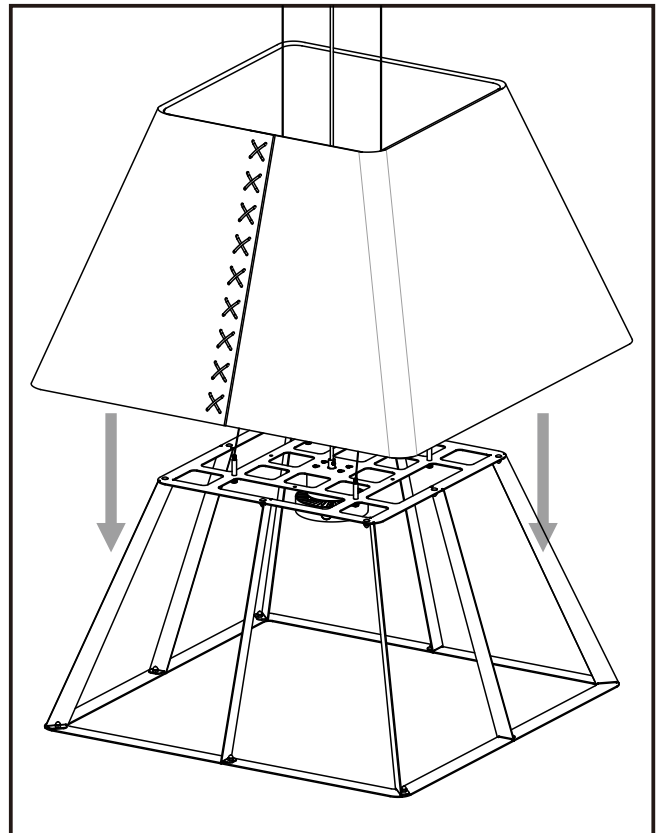


3. Secure the mounting plate to the ceiling junction box

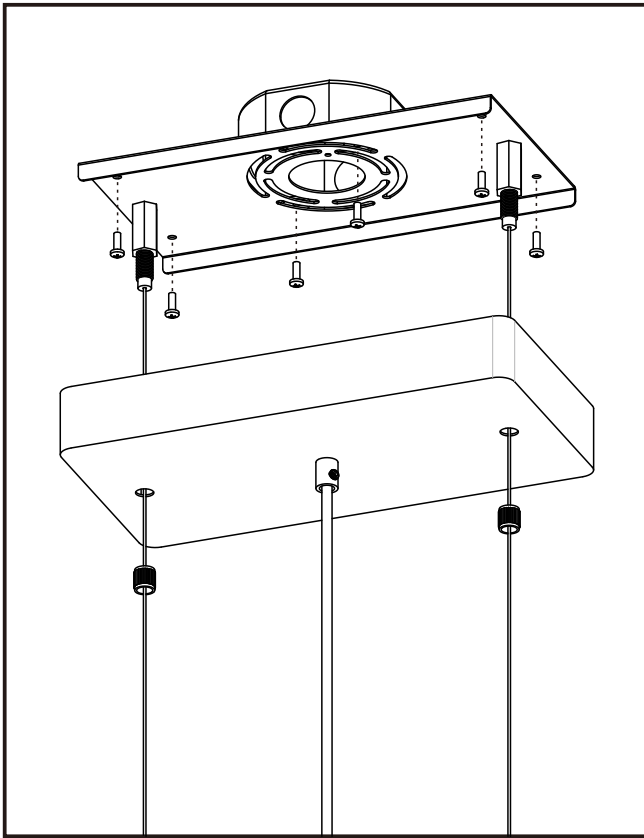

4. Complete wiring connections in compliance with NEC or local electrical codes

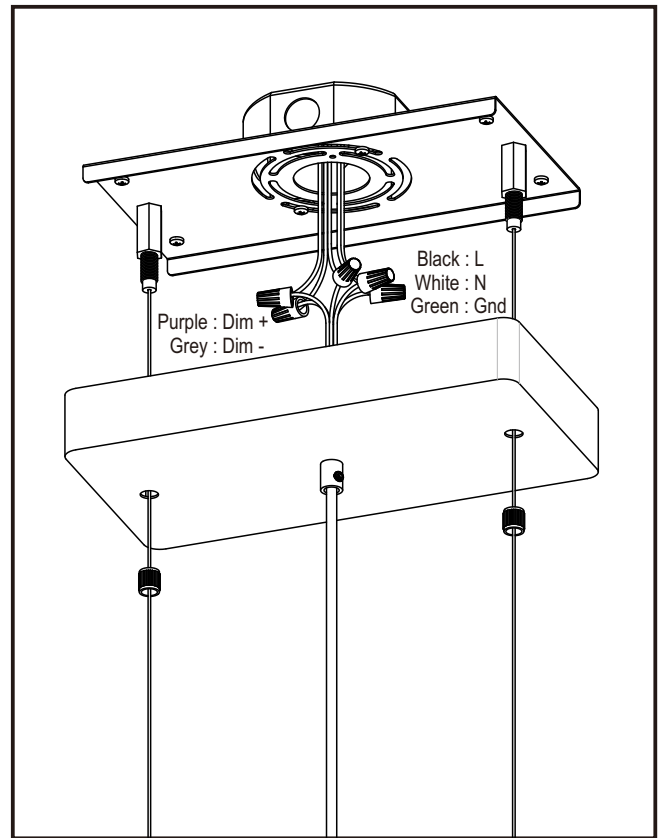

5. Lift and seat the canopy flush to the ceiling

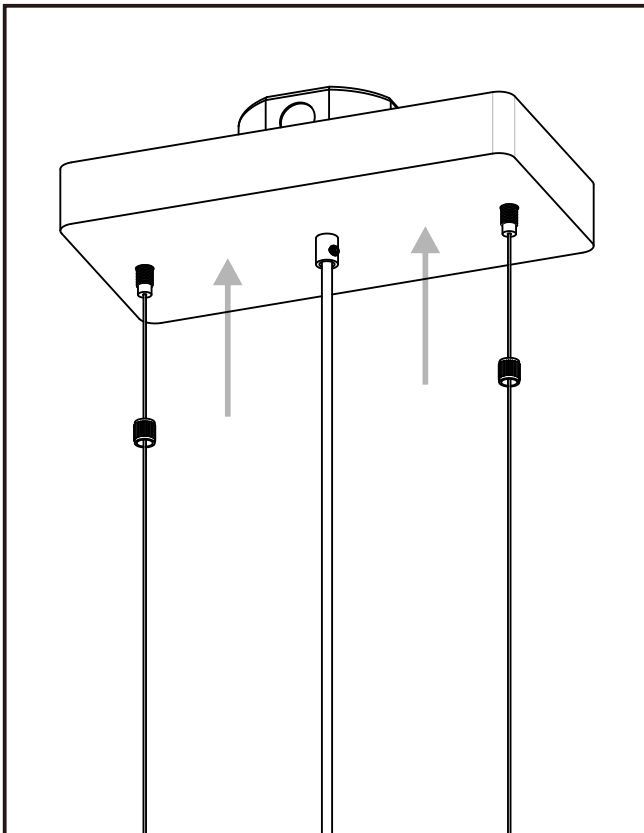

6. Tighten the thumb nuts

